


R	1, 2, 18,	3, 4,	5,	6, 7, 8, 9,	10, 11, 19,	12, 13, 14,	15, 16, 17,	18,
C	1, 2, 18,	24,	25,	26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38,	39, 40, 41, 42, 43,	44, 45, 46, 47, 48, 49, 50, 51, 52, 53,	54, 55, 56, 57, 58, 59, 60,	61, 62,
L	6, 7a, 7b,	8, 9, 10, 11, 9,	12, 13, 14, 15, 16, 17, 18, 19,	20, 21, 22, 23,	24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38,	39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53,	54, 55, 56, 57, 58, 59, 60,	61, 62,

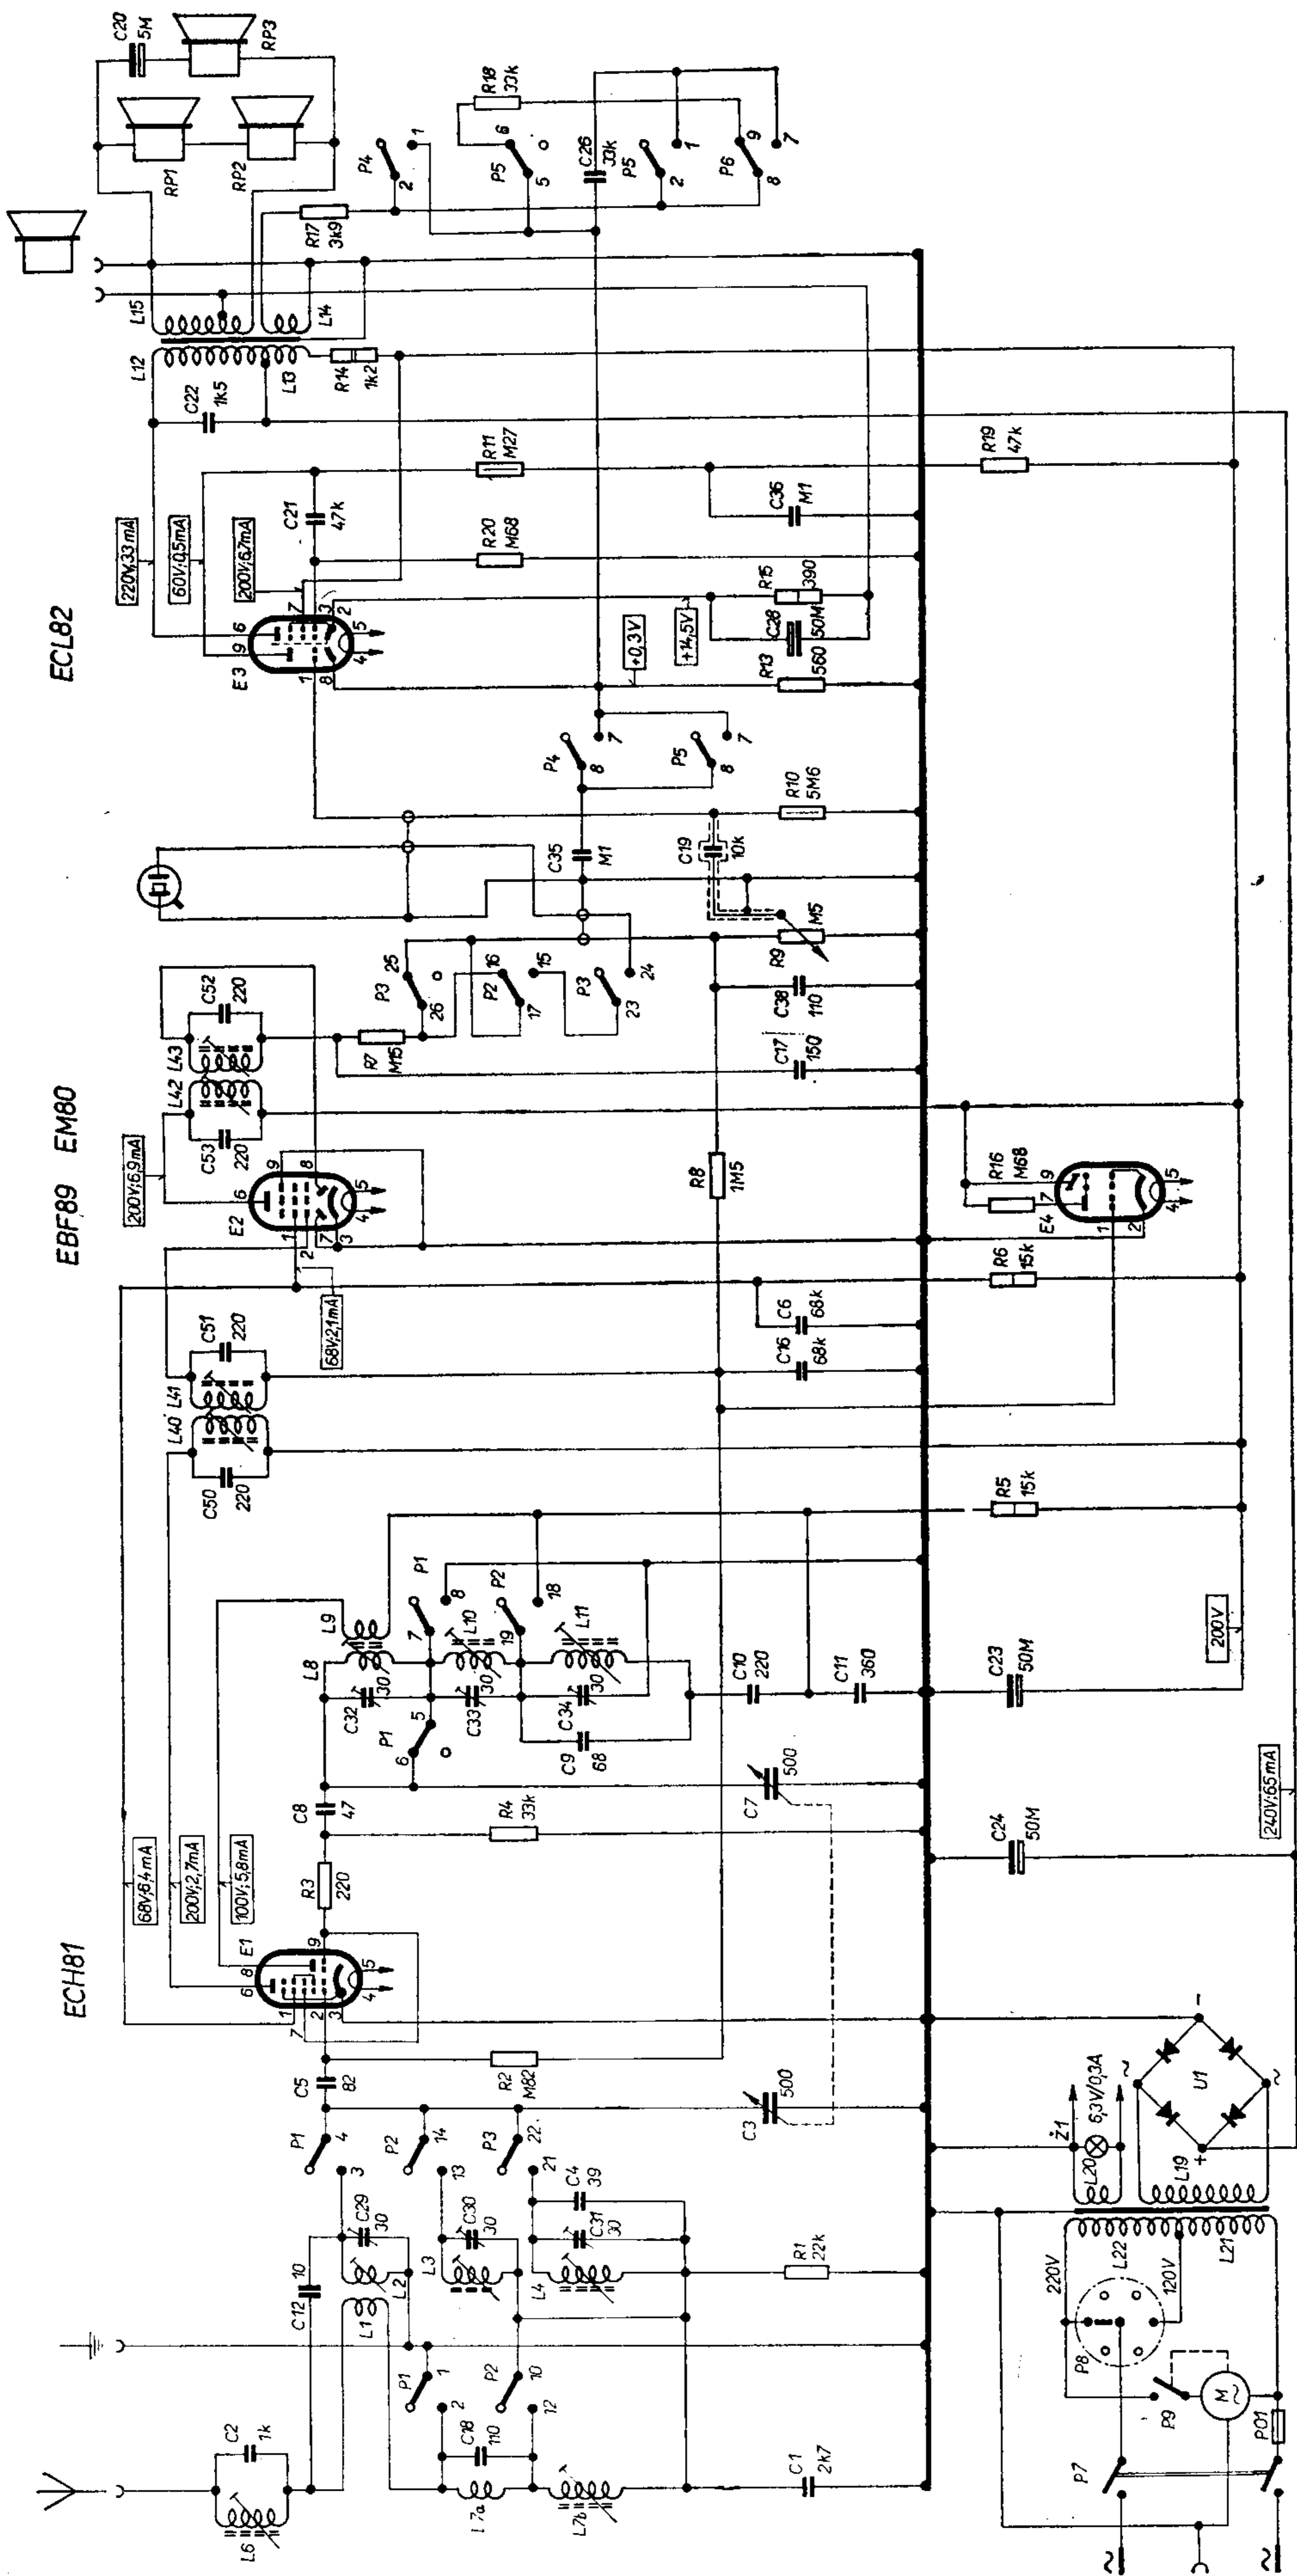


TLAČÍTKOVÝ PŘEPÍNAČ P1-P3

TLAČÍTKO OZNAČENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ - TAKTO - SPOJÍ SE	ROZPOJÍ SE
KV P1	1-2, 3-4, 7-8,	5-6,
SV P2	10-12, 13-14, 15-17, 18-19,	16-17,
DV P3	21-22, 23-24,	25-26,

TLAČÍTKOVÝ PŘEPÍNAČ P4-P6

TLAČÍTKO OZNAČENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ - TAKTO - SPOJÍ SE	ROZPOJÍ SE
REČ P4	1-2, 7-8,	—
ORCH P5	1-2, 7-8,	5-6,
BAS P6	7-8,	8-9,

PATICE ELEKTRONEK

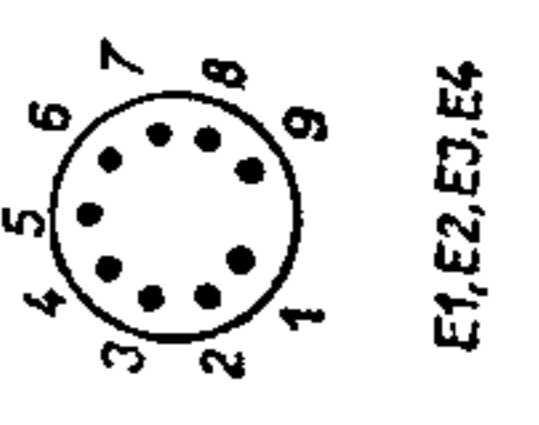

E1, E2, E3, E4